



400 SERIES: WINDOW WIRING EXAMPLE



**400 Series:
Ventec 400 CP
Stairwell Roof Vent
Installation Example**
(indicative only)

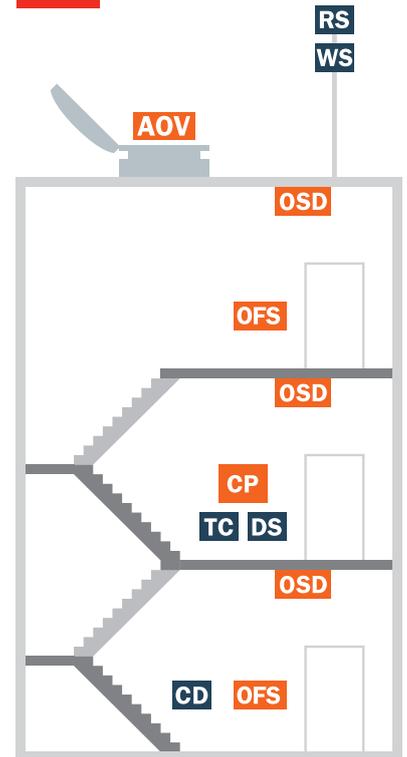

**IT IS NOT COMPLIANT TO RETRO FIT A MOTOR
TO A WINDOW TO MAKE IT AN AOV**

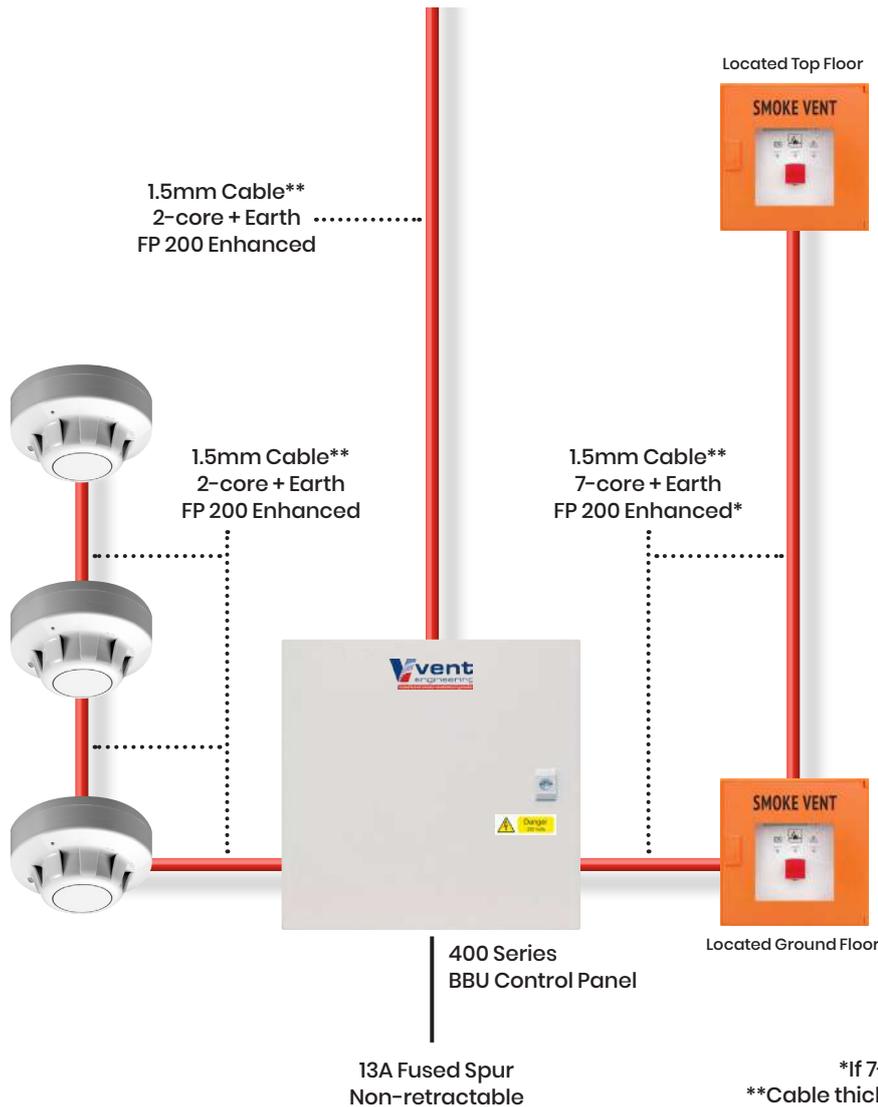

KEY:

- CP** Ventec 400 Control Panel
- AOV** Automatic Opening Vent
- RS** Rain Sensor
- WS** Wind Sensor
- OSD** Optical Smoke Detector
- DS** Retractive Day Switch
- TC** Thermostatic Controller
- CD** Carbon Dioxide Sensor
- OFS** Orange Firemans Switch


*If 7-core unavailable – use 2x 4-core FP 200 Enhanced
**Cable thickness needs to be calculated by the site electrician

400 SERIES: WINDOW WIRING EXAMPLE




**400 Series:
Ventec 400 CP
Stairwell Window
Installation Example**
(indicative only)

**IT IS NOT COMPLIANT TO RETRO FIT A MOTOR
TO A WINDOW TO MAKE IT AN AOV**

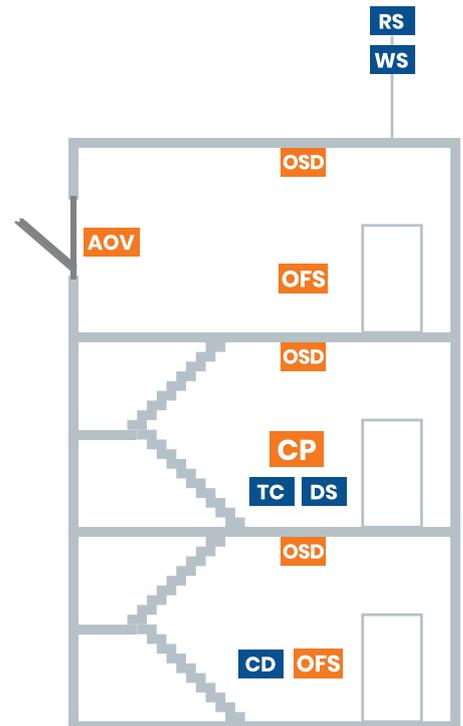

KEY:

- CP** Ventec 400 Control Panel
- AOV** Automatic Opening Vent
- RS** Rain Sensor
- WS** Wind Sensor
- OSD** Optical Smoke Detector
- DS** Retractive Day Switch
- TC** Thermostatic Controller
- CD** Carbon Dioxide Sensor
- OFS** Orange Firemans Switch

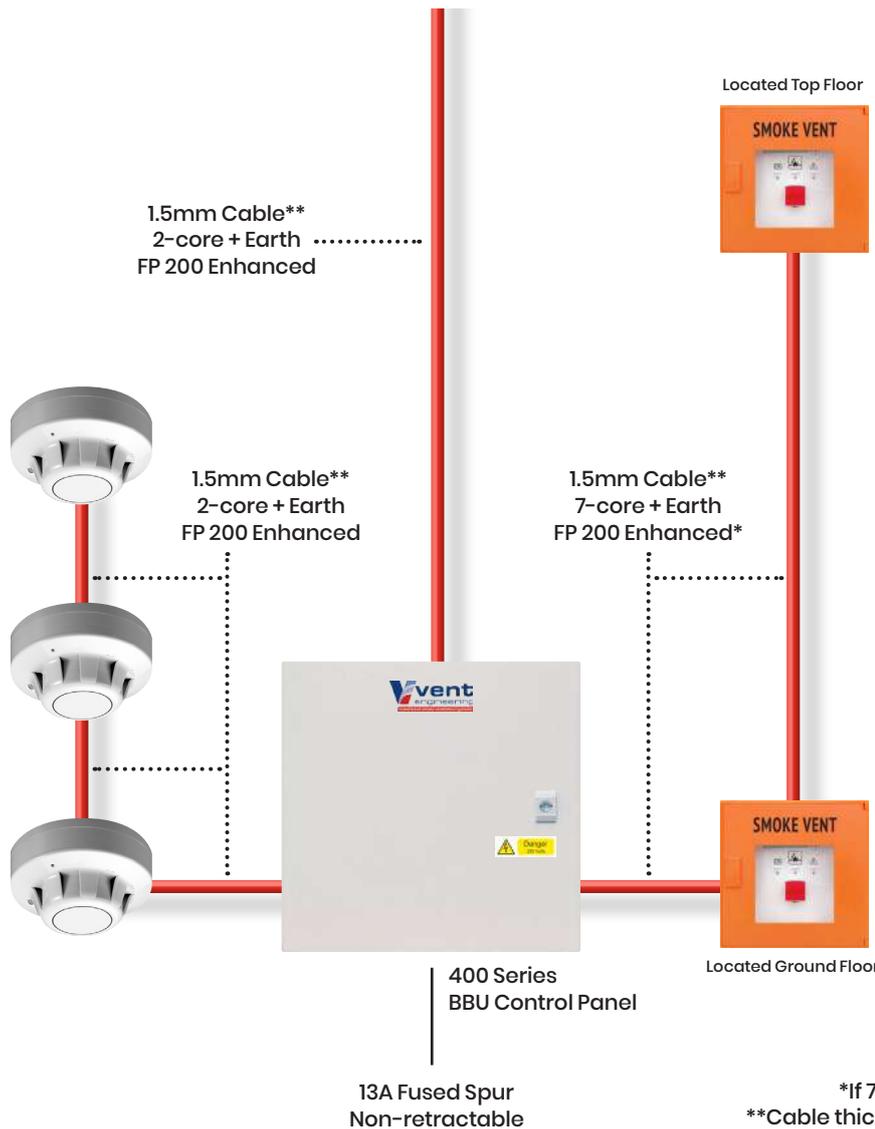

*If 7-core unavailable – use 2x 4-core FP 200 Enhanced
**Cable thickness needs to be calculated by the site electrician